

TL5102 Operating Instructions



The back can be adjusted in height by 8cm with 8 locking positions. Place hands on either side of the back and lift. To lower the back, lift to the highest position and push down.

The arm has 5 locking positions. Lift the arm to increase the height. To lower the arm, lift to highest point and push down. The arm pad can swivel 30° either side.

Tension adjustment control. Turn to increase/decrease tension of the back angle adjustment.

Seat height adjustment lever. Lift lever to raise the seat height. To lower, lift the lever and use body weight to lower the seat.

Back angle adjustment lever. Lift lever to release for free float movement. Push the lever down to lock to desired

Seat: Width = 48 Depth = 44
Seat Height = 46-59
Medium Back: Width = 43 Height = 43
High Back: Width = 43 Height = 53
Max weight load = 150kgs